

## vt02f8 Setup:\\

<b>Antennas</b>	At-Mp-Ho-Pa
<b>Start</b>	73 13:00:00
<b>Stop</b>	73 14:05:00
<b>PI</b>	LBA fringe-check
<b>Channel 1</b>	IFP#1 1665 - 1669 MHz USB RCP
<b>Channel 2</b>	IFP#2 1665 - 1669 MHz USB LCP
<b>Sky Center Freq</b>	1667 MHz
<b>Bandwidth</b>	4 MHz
<b>Recorder</b>	Disk through S2
<b>DAS Mode</b>	<a href="http://at4s.pro">at4s.pro</a>

Ftp: <ftp://ftp.atnf.csiro.au/pub/people/vlbi/vt02/vt02f/vt02f8>

--

## Comments:\\

Fringe check for v195a

Connect DAS to S2, VSIC to S2 via BG2 adapter

### Swap cable must be installed

Record on /data/internal

Use RecordMode "Channel 1,2" in disko or (-c oox in vsib\_record)

On S2 type "uic feedthru on"

From:

<https://www.atnf.csiro.au/vlbi/dokuwiki/> - **ATNF VLBI Wiki**

Permanent link:

<https://www.atnf.csiro.au/vlbi/dokuwiki/doku.php/lbaops/lbamar2006/vt02f8?rev=1142227571>

Last update: **2015/12/18 16:38**

