

Setting up an Xraid for a direct connection to PC or laptop

- Connect the PC/laptop network port directly to one of the Xraid network ports by a standard Cat5e cable. A cross-over cable is *Not needed*.
- Set a static network address on your PC/laptop to

| Address | 169.254.0.10 |

Netmask	255.255.0.0
Network	169.254.0.0
Broadcast	169.254.255.255

* To discover the network address of the Xraid run ==>> ping -b 169.254.255.255 you should get an return from the Xraid IP

- Raid the Apple RAID Admin Tool and enter this IP address as the destination host
- If you want to do this more than once, set a static IP address on the RAID admin, e.g.

| Address Xraid | 192.168.1.50 |

Address PC	192.168.1.10
Netmask	255.255.255.0
Network	192.168.1.0
Broadcast	192.168.1.255

then update the client host in RAID Admin Tool to point to 192.168.1.50

From: <https://www.atnf.csiro.au/people/Tasso.Tzioumis/vlbi/dokuwiki/> - **ATNF VLBI Wiki**

Permanent link: <https://www.atnf.csiro.au/people/Tasso.Tzioumis/vlbi/dokuwiki/doku.php/lbaops/xraidmonitoring>

Last update: **2015/12/18 16:39**

